



Cake Masters

Best ingredients & tools



Cake Steamer Kuchendampfgerät

Please read and retain these instructions and cleaning hints for future reference.

Bitte lesen Sie vor der Benutzung diese Bedienungsanleitung
mit den Anwendungs- und Reinigungshinweisen.

INSTRUCTION MANUAL

The cake steamer produces a steam that makes it easy to remove unwanted residues of icing sugar, starch or cornstarch from fondant.

The steam gives fondant, sugar pastes but also decorative elements such as flowers and leaves a silky and natural shine.

The steamer is also a suitable tool for making wafer paper flowers.



SAFETY INSTRUCTIONS

Please read the following operating instructions carefully before using the machine.

1. To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating switch button.
2. Use appliance only for its intended use.
3. To avoid the risk of electric shock, do not immerse the appliance in water or other liquids.
4. Never yank cord to disconnect from outlet. Instead, grasp plug and pull it out gently.
5. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
6. Always disconnect appliance from electrical outlet when filling with water, emptying, or whenever it is not being used.
7. Do not operate appliance with a damaged cord, or when the appliance has been dropped or damaged. To avoid the risk of electric shock, do not attempt to disassemble or repair the appliance. Take it to a qualified service person for evaluation and repair. Incorrect reassembly or repair could cause the risks of fire, electric shock, or injury to persons while using the appliance.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.
9. Burns could occur if touching hot metal parts, hot water, or steam. Be careful when you turn a steam appliance upside down – there may be hot water in the reservoir.
10. To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
11. If an extension cord is absolutely necessary, a 10 ampere rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

WARNINGS

1. Never fill the water reservoir when the power cord is plugged in.
2. Allow the machine to cool for at least 5 minutes after it has been used.
3. Never add cold water into hot water tank. Steam may spray out of the filling hole and cause injuries. Always let the appliance cool before adding water.

TECHNICAL DATA

Power output: 800W

Power consumption: 220-240V, 50/60Hz

Connection cable: 2.6m

Dimensions (L/W/H): 130 x 85 x 210mm

Weight: 585g

Water tank volume: 140ml



FILLING THE STEAMER WITH WATER

1. Place the steamer on a flat, level surface.
2. Twist the top cap and remove.
3. Fill the water tank with a measuring cup. Use distilled water.
4. Never fill the water above "MAX" mark.
5. Replace the top cap.

STEAMING CAKES, SUGAR PASTES AND OTHER ITEMS

PLEASE NOTE:

The water tank must be filled and make sure the cap attached tightly before proceeding with the following steps.

1. Plug the steamer power cord into an electrical outlet. The heat indicator light will illuminate when turned on.
2. The steamer will start to spray after approx. 50 seconds.
3. Direct the steam nozzle towards the object you wish to steam. But keep a safe distance between the cake steamer and the object of minimum 15cm / 6in.
4. Pass the steamer over the surface using a back and forth motion. For smaller items place the cake steamer on the work surface and pass the item through the steam carefully.

CAUTION:

Never point the steam nozzle towards your body, other people, pets or plants.

DISPOSAL

Information on WEEE (Waste Electrical and Electronic Equipment)

The following information is intended for private households that use electrical and/or electronic equipment. Please follow these important instructions in the interest of environmentally sound disposal of old appliances and your own safety.



1. Information on the disposal of WEEE and on the meaning of the symbol according to Annex 3 to the ElektroG

Owners of WEEE must dispose of it separately from unsorted municipal waste. WEEE may therefore not be disposed of as unsorted municipal waste and in particular does not belong in household waste. Instead, this waste equipment must be collected separately and disposed of, for example, via the local collection and return systems. Owners of WEEE shall also separate spent batteries and accumulators that are not enclosed in the WEEE, as well as lamps that can be removed from the WEEE without being destroyed, from the WEEE before handing it in at a collection point.

The latter does not apply if the WEEE is separated from other WEEE in accordance with Article 14 (4), fourth sentence, or (5), second and third sentences, ElektroG within the framework of opting out by the public waste management authorities for the purpose of preparing it for reuse.

By means of the symbol according to Annex 3 to the ElektroG Act, owners can recognise the WEEE that are to be collected separately from unsorted municipal waste at the end of their service life. The symbol for the separate collection of electrical and electronic equipment represents a crossed-out wheeled bin and is designed as follows: see picture

2. Free take-back of WEEE by distributors

Distributors (any natural or legal person or partnership offering or making available on the market electrical or electronic equipment) are obliged towards end-users to take back WEEE free of charge as follows:

a) Return/collection in the case of purchase of a new appliance and delivery to a private household

When concluding a sales contract for a new electrical or electronic appliance, the distributor is obliged to take back free of charge a WEEE of the same type that fulfils essentially the same functions as the new appliance. If the location is a private household, the return is effected by a free collection. For this purpose, a WEEE of the same type with essentially the same functions can be handed over to the delivering transport company when the new electrical appliance is delivered.

If the new electrical appliance is sold exclusively by means of distance communication (Section 312c (2) of the German Civil Code (BGB)), the following shall apply restrictively:

- The free collection of WEEE of the same type and function is only carried out if it is a device of category 1 (heat exchangers), 2 (screens, monitors, devices with screens with a surface area of more than 100 square centimetres) and/or 4 (large devices where at least one of the external dimensions is more than 50 centimetres).

- If the WEEE is instead in categories 3, 5 and/or 6, it will not be collected free of charge and instead the following letter b) applies to the free return.

An overview of the device categories and the devices covered in each case can be found here: https://www.gesetze-im-internet.de/elektrog_2015/anlage_1.html

b) Return of new appliance purchased and sold elsewhere / return of small electrical appliances

When concluding a purchase contract for a new electrical appliance which is not delivered to private households and when selling a new appliance of categories 3, 5 and/or 6 exclusively by means of distance communication (Section 312c (2) of the German Civil Code (BGB)) with delivery to private households, there is the possibility to return a WEEE of the same type which essentially fulfils the same functions as the new electrical appliance to the distributor free of charge.

The same possibility exists independently of the purchase of a new electrical appliance also for WEEE, which are not larger than 25 centimeters in any external dimension. In this case, the possibility for the end user to return the equipment to the distributor is limited to 3 of WEEE per type of equipment.

In the case of distribution exclusively using means of distance communication (§ 312c para. 2 BGB), the return under the above conditions

- of WEEE of categories 3, 5 and/or 6
 - of WEEE which are not larger than 25 centimetres in any external dimension,
- by providing suitable return facilities within a reasonable distance from the relevant end user. Otherwise, the return shall take place at the place of delivery or in the immediate vicinity thereof. Distributors must have set up appropriate return facilities for this purpose.

3. Information on the possibilities for returning WEEE

Owners of WEEE can hand them in within the framework of the possibilities for the return or collection of WEEE set up and available by public waste management authorities, so that the proper disposal of the WEEE is ensured. If necessary, it is also possible to hand in electrical appliances there for the purpose of reusing the equipment. You can obtain more detailed information from the respective collection or return point. Under the following link it is possible to view an online directory of collection and recovery points:

<https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

4. Note on data protection

Some of the WEEE to be disposed of contain sensitive personal data (e.g. on a PC or smartphone) that must not fall into the hands of third parties.

We expressly point out that end users of WEEE must take responsibility for the deletion of personal data on the WEEE to be disposed of.

5. Reference to our WEEE registration number

We are registered with the Stiftung Elektro-Altgeräte Register, Nordostpark 72 in 90411 Nuremberg, Germany, as a manufacturer of electrical and/or electronic equipment under the following registration number (WEEE-Reg.-Nr. DE): DE98894206

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No light on the switch.	The cake steamer is not plugged in.	Plug the steamer power cord into an electrical outlet.
	The household circuit breaker has been tripped; there is a blown fuse in the electrical circuit.	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area's electrical provider.
The steamer heats up but there is no steam.	The water tank is empty.	Refill the water tank.
	There is mineral build-up in the steamer.	Remove the mineral build-up.
The steamer flow light is flashing.	There is mineral build-up in the steamer.	It is normal for the flow of the steam to stop for a few seconds. If it stays off for a longer period, check for mineral build-up.

CLEANING AND STORING

1. Empty any remaining water to avoid mineral build-up.
2. Remove all accessories from the steamer.
3. Reattach the water reservoir cap. Do not over tighten.
4. It is recommended to store the cake steamer and any supplied accessories together in the original packaging.
5. Store the cake steamer in a cool, dry place.